


iroha zen

How to Use / Safety Instructions


Thank you for purchasing the iroha zen!

For your safety and proper use of this product, please read instructions before use.

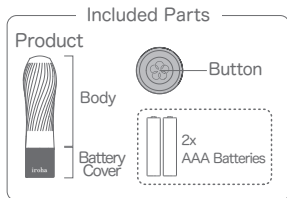


How to Use

- Press and hold button to turn ON/OFF. ● Press button to cycle through vibration modes. ● After use, turn product OFF for storage.



[How to Change Batteries]

- ① Twist Battery Cover anticlockwise to open Battery Box, and insert 2x AAA Battery.
- ② Ensure positive and negative ends of battery are faced correctly.
- ③ Reattach Battery Cover by aligning ◀ and ▶ as shown below. Turn clockwise to close.

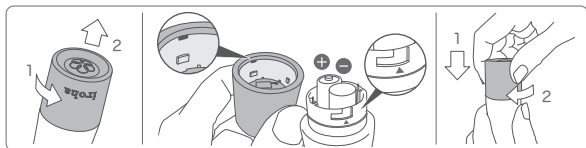

- Ensure cap is facing up to prevent batteries from falling out. ● Do not insert fingers or other objects into battery compartment or inside of cap, to prevent damaging circuitry. ● Replace batteries only when the item is OFF. ● Product life may be subject to change depended on frequency and intensity of use. ※ If you feel product vibrations may be weak, please change the batteries to first attempt to resolve the situation.

[How to Clean]

- ① Wash with tepid water. ② If using soap, use a mild, neutral soap. ③ After washing, pat dry with a soft towel.
- Wash item only when the cap is attached securely. ● Do not submerge the product for long periods of time or boil the product. ● Do not use any acidic or alkaline washing agents, alcohol, or corrosive substances to clean the product.

[Storage]

- Please keep away from direct sunlight and store in a cool, dry place. Not doing so may cause defects, overheating and fire hazards. ● Please do not store with flammable solvents or oil-based products. ● Ensure product is OFF before storing.

[Regarding Water-tightness]

- This product is designed to be waterproof, but improper use may compromise water-tightness. ● Exposure to strong currents of water or depths of over 50cm can compromise water-tightness and lead to product damage. ● Please do not get hair, dirt or other substances trapped inside the Water-resistance Packing. These can cause an opening for water to enter the product. ● Please ensure not to damage the Water-resistance Packing when changing battery. ● Please make sure to check the Water-resistance Packing for damage to prevent the possibility of water entering the product.

[Safety Information]

- Wash before first use and after every use. ● Do not expose to water if the product is loose or the battery box is exposed. ● Avoid use in hot and humid places or in salt water or seawater. This may cause damage to the product. ● Do not use on any areas of the body where the skin is irritated, inflamed or otherwise damaged. ● Do not use the product in the following circumstances: - When extremely tired. - When under the influence of alcohol. ● Do not drop or expose the product to extreme forces. This may cause electrical short circuiting or defects. ● If you feel any physical abnormalities during use of the product, please cease use immediately and seek medical attention. ● If you find any damages or defect with the product, please cease use immediately and turn the power OFF. Use of damaged product may cause injury. ● To prevent the transfer of STIs, do not share. ● Do not use on same area of body for over 15 minutes. ● Use only water-based lubricants with this product.

[WARNING]

- Do not attempt to deconstruct, modify, or fix the item yourself. This may cause fire hazards or injuries. ● Those with pacemakers or other electronic medical devices, who are pregnant, or are otherwise currently receiving medical treatment, please discuss use of this item with a medical professional before use. ● Keep out of reach of children. Product contains small parts that may be accidentally swallowed.

[Regarding Batteries]

- Please use only Alkaline AAA batteries with this product. Non-alkaline batteries may cause extreme shortening of running time. ● Always read safety information of the batteries. ● Do not expose batteries to fire, short circuit batteries or attempt to deconstruct the batteries. ● Do not expose batteries to water. ● Always confirm positive and negative ends of the batteries. ● Remove dead batteries immediately. ● If you are not using the product for a prolonged period of time, remove batteries. ● If you are exposed to liquid from the batteries, please wash area exposed and seek medical attention.

[Troubleshooting]

If you believe the item is defective, please confirm:

- Are there batteries inside the battery box? ● Have you held the power button down for 2-3 seconds? ● Are the batteries out of power? ● Is anything clogging or blocking the power connectors? ● Are the batteries facing the correct way? ● Is the Cap placed on in the correct position?

Product Specifications

Contents	Product, 2x Tester AAA Batteries
Product Name and Code	iroha Pleasure Item zen - MATCHA / HMZ-01 iroha Pleasure Item zen - HANACHA/ HMZ-02 iroha Pleasure Item zen - YUZUCHA/ HMZ-03
Running Time / Water-tightness	Approx 4 Hours / Waterproof up to 50cm
Product Size / Weight	34 × 34 × 127mm / 73g
Materials	Silicone, ABS
MADE IN CHINA	

Product Warranty

Warranty Period: 3 Months from Purchase

※ Warranty inquiries require proof of purchase such as a receipt.

For contact information please visit: <http://iroha-tenga.com/en/>